

Sets Up in 60 Seconds with Self Locking Hinges
 All Poles Integral to Tent Like an Umbrella
 Use as a Change Room, Bathroom, or Sun Shade

PINNACLE TENTS

Your Source for Tents and Portable Shelters

Portable Privacy Shelter - Model #136



Size	Interior: 4' x 4' x 78"H; Packed size: 28"L X 7" Diameter
Wall Material	75D 185T polyester taffeta; 800mm; Fire Resistant to CPAI-84 Standards
Floor	16 Sq. ft
Door	1
Windows	3
Poles	Fiberglass solid 9.5mm+7.9mm
Accessories	carry bag, stakes, and instructions
Packaging	Individually boxed
Carton Size	28.7" x 12.2" x 4"
Net Weight	6.5 Pounds
Additional Features	Hanging loop inside center of roof to hang shower or light. Sod cloth (6" width material) that lays around perimeter to seal walls at ground level. Flap closures on windows.

Privacy Shelter - Model 136

Pinnacle Tents
 4022 E. Greenway Road
 Suite 11-153
 Phoenix, AZ 85032

Phone: 877-379-8269
 Fax: 877-379-8269

E-mail: sales@pinnacletents.com

 
PINNACLE TENTS

SET UP INSTRUCTIONS OF SHELTER

Read and understand each step of set up instructions prior to working with this tent. The poles are already attached to the tent as an integral part of it so there is no need to join poles or thread through the pole sleeves.


step 1

Place the folded tent on the ground with poles in a vertical position and lay out the tent with all poles radiating from the center hub like a star.

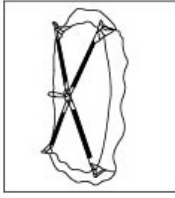



step 2

Grasp the round, molded hub or its lanyard and raise tent high. The four legs of pole will hang down. Make certain no fabric is caught between the hub and the four upper poles.

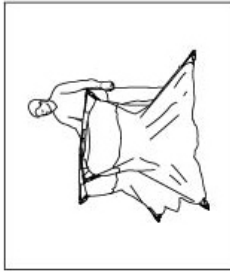


step 3

Holding the top hub with one hand (keeping state of step 2), grasp 2 inches below the upper hinge with free hand and bend that pole outward until the self-locking hinge locks in place. (It locks automatically when the lower spring-loaded collar slides into place). Note the middle hinge of that same pole will be unfolded automatically when the upper hinge locks. Now walk around the tent (or turn the tent) and lock the remaining upper pole hinges. Tent is erected in half shape when all upper hinges lock.

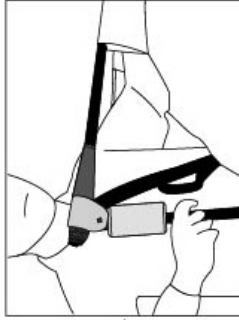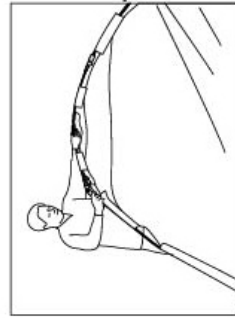

step 4

When complete locking 4 upper pole hinges, start to lock lower hinges. Grasp the pole approximately 2 inches over the lower hinge assembly with one hand and one foot below the hinge assembly with the other hand. Push inward with top hand while pulling forward the other hand simultaneously until the lower hinge locks in position.

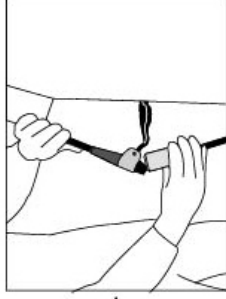

step 5

Locate the tent in desired direction and stake the corners, stretching the floor out gently. Apply guy ropes at the lower hinges when it is windy.

TAKE DOWN



step 1

Remove stakes and keep all accessories in their respective storage bag.

step 2 Collapse the tent




Follow reverse steps of set up instructions.

Release the lower hinge by sliding down the spring-loaded collar of lower hinge assembly, while pushing it inwardly a little. Release remaining hinges in same manner. Tent is collapsed in half shape.

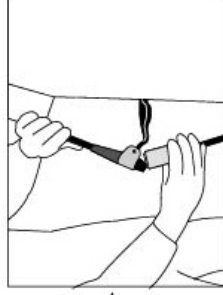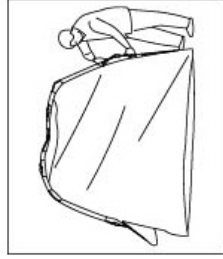

step 3

Release upper locking hinge in same manner as releasing lower hinge, while holding top hub with one hand. When upper hinge is released, middle hinge will be automatically folded.

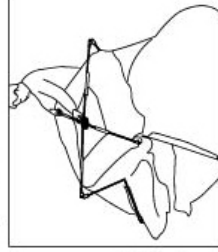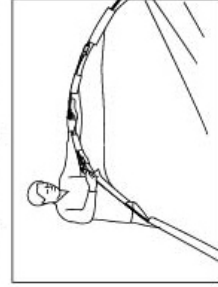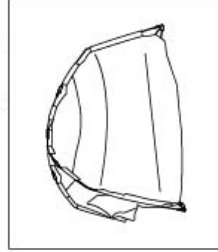

step 4

Align the tent assembly like a star, keeping all poles radiating from the center hub. Gather the poles together like the "step 1 of set up instructions". Lay the tent on the ground, press any trapped air inside. Wrap and roll the tent fabric around the poles to it's minimum size.