



PINNACLE TENTS FOUR ROOM CABIN TENT SETUP AND ASSEMBLY INSTRUCTIONS

Model number 770

WARNINGS

- ◆ The performance and integrity of the tent is very dependent on the proper setup so it is important that your Pinnacle Tents cabin tent is setup, assembled, and secured properly per the instructions or damage to the tent will result.
- ◆ We advise you to unpack the tent to make sure all parts are present and functional and familiarize yourself with the tent and setup prior to taking it to a remote campsite.
- ◆ Direct sunlight will degrade any synthetic materials such as the polyester fabric, eave pole loops, and stake loops over time. For extended operation, of prolonged month long setup, we recommend setting up the tent where shade is available.
- ◆ Always make sure your Pinnacle Tents cabin tent is clean and dry before packing and storing in a dry environment. The polyester is treated for mildew resistance but any fabric will mold if stored in a wet or damp environment. Clean only with a weak mild liquid dishwashing detergent solution or Fels Naptha soap.
- ◆ Always secure your Pinnacle Tents cabin tent properly with all supplied guy ropes to insure proper operation and to make sure the structure is secure even if the weather does not appear threatening.
- ◆ Keep fire and flammable materials away from the tent. Do not leave fires unattended.
- ◆ Do not use any combustible fuel items such as heaters or lanterns inside the tent at any time.
- ◆ Do not allow any organic solvents such as some insecticides, repellants, or sun screens to contact the tent fabric at any time. If the factory water resistance is ever damaged you can apply any aqueous water repellent or seam sealer that is commercially available.
- ◆ When taking down the tent do NOT pull on the stake loops to remove the stakes. This will overstress the stake loop and can cause seam failure.

LIMITED WARRANTY


- ◆ Pinnacle Tents warrants to the original purchaser that our products are free from defects in materials and workmanship for a period of ninety (90) days. If a warranty claim should occur please contact our customer service department.
- ◆ Normal wear and tear or damage caused by accident, abuse, alteration, misuse, improper setup, improper care, environmental storm or ultra violet light damage are not covered by our warranty.
- ◆ In no event shall Pinnacle Tents be liable for incidental or consequential damages.

PINNACLE TENTS FOUR ROOM CABIN TENT SETUP AND ASSEMBLY INSTRUCTIONS

Model number 770


STEP 1

Remove the canopy frame from the carton and pull on opposite diagonal corner upright poles to expand it to its full width. Once the frame is fully expanded and standing on its own, lower the 4 legs to the half height position.

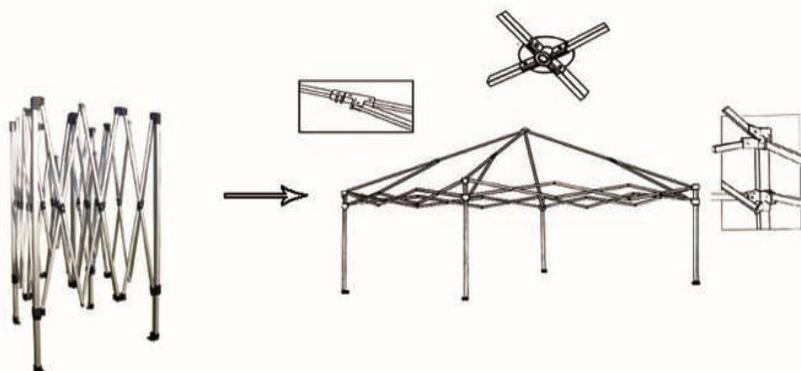


STEP 2

Spread out the rain fly and, with the taped seam side facing downward, drape over the roof of the canopy frame. Attach all Velcro tabs on the underside of the rain fly to the closest available cross members of the canopy frame. There are a total of 20 Velcro attach points to attach the rain fly to the frame consisting of—8 attach points at the roof ridge, 8 at the side ridge and 4 for the corners.

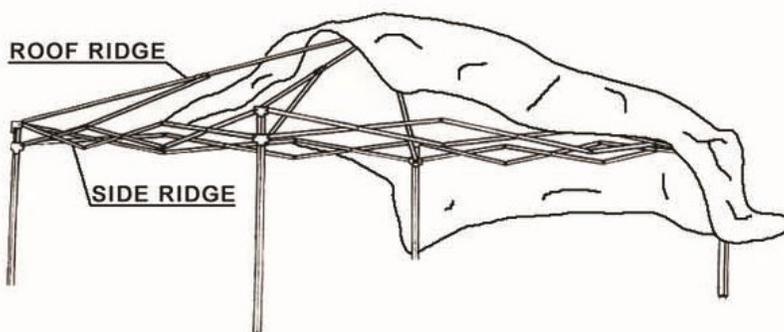


STEP 3

To prepare the inner tent for hanging under the canopy, spread the inner tent stretching it out flat and centering it under the standing canopy frame. Gently pull all the slack out of the tent and stake all four corners. Now stake all the remaining stake loops around the perimeter of the tent, making sure not to stretch the loops or floor of the tent too tight. Assemble the two ridge poles #1 and insert through the two end roof eave loops. Place pole #2 onto the end of each eave ridge pole and tie the tent to the poles with the attached ties.

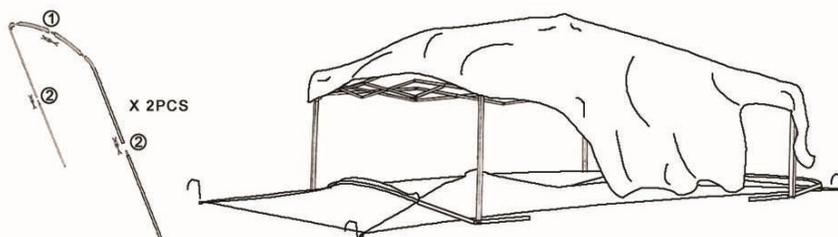

STEP 4

There are 5 steel "S" hooks on the inner tent roof - 4 at the corners and 1 at the top peak at the center. Hook all 5 to the nearest canopy cross member. Next, hook the remaining plastic hooks (total 8) to the roof ridge cross members of the central frame.

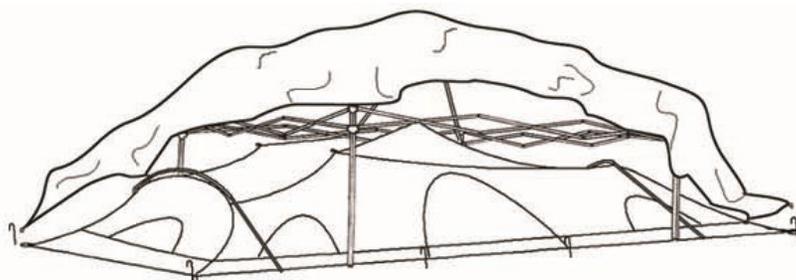


PINNACLE TENTS FOUR ROOM CABIN TENT SETUP AND ASSEMBLY INSTRUCTIONS

Model number 770

STEP 5

Carefully begin to extend the legs of the central canopy frame one at a time. Once all 4 of the legs on the central frame are extended, rotate and adjust the eave end poles to form the ends of the roof.

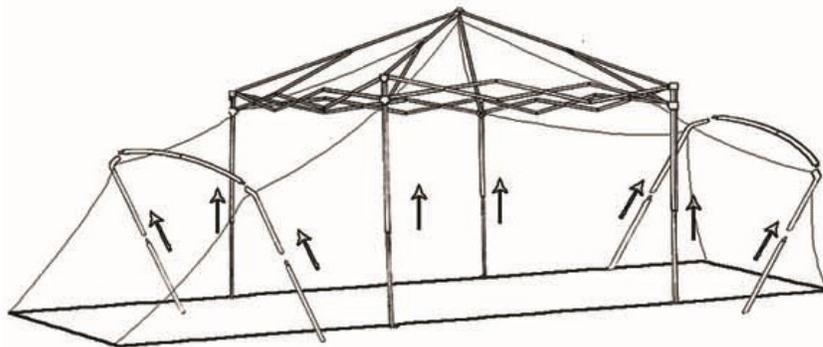

STEP 6

Carefully adjust all of the frame components including the 4 legs on the central frame and the end eave roof pole to remove any slack in the roof and the walls of the tent. Be careful not to pull the tent too tight as you may damage the fabric or the attachment loops. Make sure there is a good slope on the end side walls for water run off during rain storms.



STEP 7

Now finish covering the tent with the rain fly that is draped over the central frame by spreading the rain fly out toward the ends of the tent. Attach any remaining Velcro, hooks, and ties that are on the rain fly to the nearest frame cross member. Adjust the rain fly to provide a good slope for water run off so that it is not loose or sagging. Do not stretch the material too tight or it may damage the fabric or seams. Attach the supplied guy ropes to the loops at the end of the rain fly on each end and stake them out. Adjust with slight tension.



IMPORTANT

It is very important that you attach all guy ropes that are supplied to the loops that are provided around the top perimeter of the tent in order to provide good stability and so the tent does not get damaged. The tent is very large and wind will exert strong forces on the tent due to its size. If you use the canopies that extend outward over each door, adjustable poles are supplied and you will need to attach guy ropes to the top point of the canopy poles to provide stability. We recommend during high winds or when rain is expected that the canopies be lowered so they do not collect water, in order to provide additional storm protection to the tent, and to reduce possibility of damage to the tent.