



SETTING UP YOUR SELF-ERECTING TENT:

Take the tent out of the bag, remove the strap and release the tent away from you with a spin to self erect. CAUTION: STEP BACK TO AVOID CONTACT WITH THE TENT AS IT ERECTS.

Stake the tent down at the four corners by securing the stakes to the base ring. The following 2 steps are only necessary if you attach the rain cap. Place the fiberglass rod across the top and insert it into the grommet at each end.

Attach the hooks on the rain cap to the corresponding loops on the tent. If you wish, you can attach guy ropes to the loops on the four corners to increase stability in the wind.

FOLDING AND STORING TENT:

To dismantle, remove stakes. Unzip door.

Form a "taco" shape by gathering top and base edges together at center.

Lift the tent up, with one hand grasp the top and base at the center, with the other hand push the edge labeled A down toward the ground.

Tuck back the top most edge labeled A (see arrow) down and inward until it forms ring shapes on ground.

Slide rings over the top of each other and adjust rings to lie on top of one another.

When all rings are together, secure tent between legs and slide strap over rings to hold them together. Slide tent into bag. Then place accessories into bag to store.

