



## SET UP

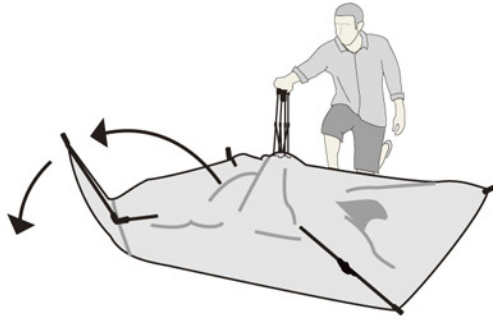

Lay tent out flat with central hub upright.  
Make sure poles are fully extended.



Standing close to the central hub,  
lift the top of the hub to head height

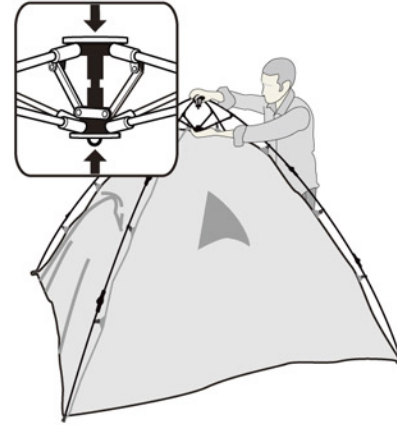


Firmly press upper and lower hubs together.  
As hubs get closer to connecting, the resistance  
will increase and the body of the tent will bow out.




**IMPORTANT!**  
Thread hook through the loop  
on the central hub.


## FOLD DOWN

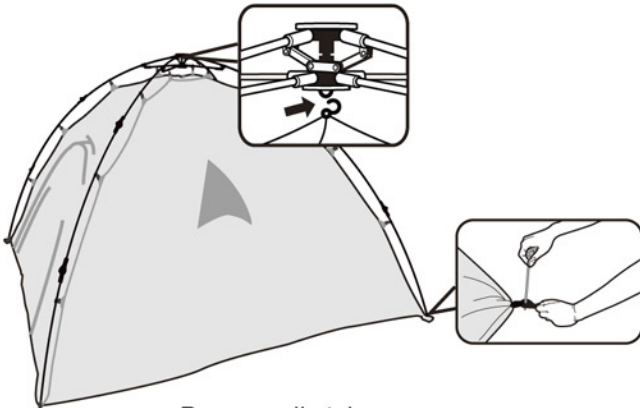

- Remove all stakes
- Remove vestibule pole
- Release top hook from the  
central hub.

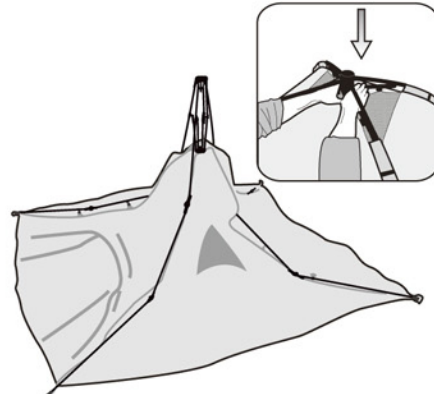


Applying pressure, separate the  
upper and lower hub. Lower central  
hub down

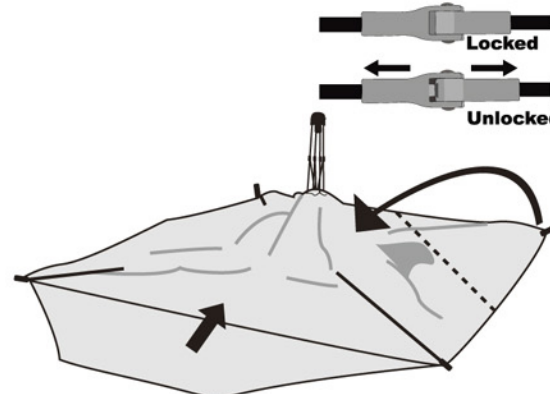

Unlock pole joints by slightly pulling pole  
sections apart.  
Holding the central hub upright, fold tent  
poles towards the hub.

## PACKING THE TENT

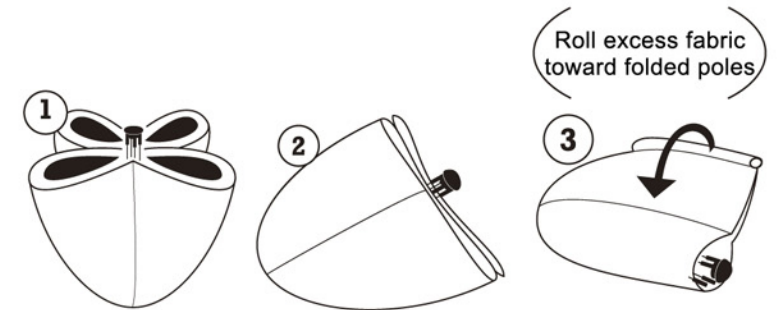

1. Fold the poles toward the hub and allow loose fabric to flower out.
2. Lay the tent on its side. All 4 poles should be tight to the hub in order to prevent pole damage.
3. Bring all excess fabric together and tightly roll towards the central hub.